


Type 80.NA

METACLAMP® for Flush Mounted NA-Connect™ Fitting

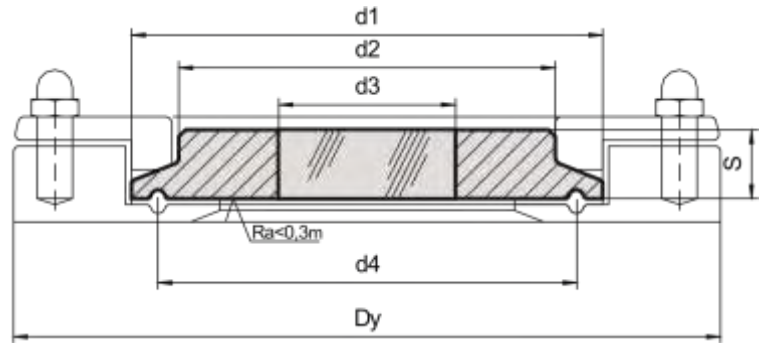

Overview

- Type 80.NA Metaclamp is designed to fit the flush-mounted NA-Connect system to offer clear process visibility and unmatched safety with easy cleaning and sterilization.
- The NA-Connect sight glass eliminates the dead leg created by a standard sanitary ferrule connection avoiding air pockets and trapped undissolved material.

Advantages

- Suitable for aseptic pharmaceutical and food applications (3-A Standard)
- Easy validation of connection for sterilization and cleaning
- Extremely compact construction
- Simple installation and maintenance
- Glass resistant to catastrophic failure
- Long working time

Ring materials Operating temperature

1.4462	-30°C to +280°C
2.4602	-60°C to +300°C
2.4610	-60°C to +300°C

Technical data

Manufactured and tested to:

Directive for pressure equipment 2014/68/EU
(DIN/EN/ISO 9001)

- AD2000 Standards W0/TRD 100
- Sight glass fused to metal conforming to DIN 7079
- Materials to VdTÜV specifications and the DIN/EN designated standards
- Glass: Borosilicate to DIN 7080 / DIN 7079

Material certificates

- Certificate of Conformity to EN 10204-3.1 or 3.2

Zulassungen

- ASM BPE

Operating conditions

- Temperature: (With light) up to 90°C
- Pressure: Up to 7 bar

For connector NA-Connect dimensions and technical data please request data sheet NAC00-S

Nominal size			PN	d1	d2	d3	d4	S	Dy
DIN	ISO	ASME BPE							
-	8/10	½" / ¾"	25	25,0	18	10	20,4	10	55
10/15/20	-	-	25	34,0	18	10	27,5	8	70
25/32/40	15/20/25	1½" / 1"	16	50,5	43,5	25	43,5	10	85
50	32/40	2"	16	64,0	56,5	30	56,5	10	100
/	50	2½"	16	77,5	69,0	35	69,0	10	112
65	65	3"	10	91,0	83,5	40	83,5	10	131
80	80	3½"	10	106,0	97,0	50	97,0	10	140
100	-	4"	10	119,0	110	55	110	12	170
-	100	4½"	10	130,0	122	60	122	16	170